# Norden Facade SOL



4.1	Norden Facade <b>SOL - System</b>	3
4.1.1	System properties	3
4.1.2	System design	7
4.1.3	Attachment to the building	8
4.1.4	Determining the lamellae spacing	9
4.1.5	Lamella forms and lamella spacing	10
4.1.6	Cleaning function	11
4.2	Norden Facade SOL - Project planning	13
4.2.1	Project planning with Norden Facade SOL	13






# System properties

<u>4.1</u>

Sun protection system

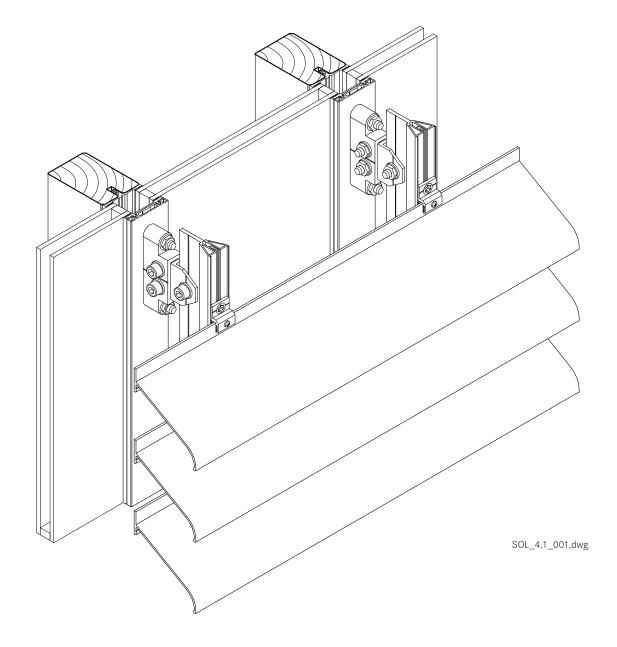





## System properties

# <u>4.1</u>

## Norden Facade SOL system description

Norden Facade SOL is a rigid aluminium sun protection system that is mounted outside of glass facades, glass roofs or windows.

Norden Facade puts together all necessary parts to suit the spe-cific property and delivers them ready to mount.

Different lamellae and variations in the spacing between them are used to control the degree of sun protection and transparency. The lamellae can be mounted parallel with or protruding horizontally in front of the vertical glass surfaces or on glass roofs.

Besides the sun protection requirements, particular care is taken to ensure correct connection with the glazing system during the development of Norden Facade SOL. The system fully satisfies the requirements placed in stabil-ity, tightness, flexibility and ease of assembly. The loads caused by the sun protection are transferred directly to the supporting structure without exerting any compres-sive load on the glazing.

The arrangement of the sun protection should be de-signed to:

- reduce the irradiation energy
- to provide anti-glare
- to ensure the desired transparency
- to allow time-dependent adjustment of the degree of irradiation

Sun position diagrams are available in order to select the suitable lamellae and lamellae spacing.

The sun protection can be mounted on all standard facades and glass roof systems, as well as on solid structures.

Norden Facade SOL sun protection is available in natural alu-minium colours or in a powder-coated version. Special colours are possible.

Special separating elements allow zonal opening, raising or folding down of the lamellae for cleaning purposes.



## System design

# $\frac{4.1}{2}$

## Assembly sequence

- The sun protection bearings (3) are screwed on to the mullions of the glass facade in predefined intervals. It is necessary to dismantle the cover strips if the system is fitted retroactively.
- 2. Threaded bars M10 (9), designed to suit the glass thickness, are screwed into the sun protection bearings (3) before the cover strips are fitted.
- 3. After the cover strips are fitted, a sealing washer and a nut tightened by hand (7) seal off the threaded bar channel and keep the sun protection mounts in a predefined interval from the glazing.
- 4. The clamping plate (8) is pushed on to the threaded bars and fastened against the sun protection bearing using nuts (3). Different system sizes of the clamping plates allow for variable intervals between the sun protection and the glass.
- 5. The lamella fork (10) is the connecting piece between the clamping plate and the lamella carrier rail (11). At the same time, the lamella fork is the spacer and pivot bearing for the function 'Cleaning position' of the sun protection lamellae. The lamellae are connected to form one unit and can be folded up and down as required. The size of the zonal units is variable. Gas spring solutions are possible to improve handling.
- 6. The different lamella types (15) are attached to the lamella carrier rail (11) using lamella holders (13) and mounting brackets (14). Rubber profiles (12) reduce the vibration acting on the supporting structure and hence allow the lamellae to move silently when extending longitudinally. An additional mounting bracket is attached at each point to ensure that longitudinal extension proceeds in one defined direction.

## Caption:


- 1. Timber profile
- 2. Inner seal GD 62xx / GD 52xx
- 3. Bearing SZ 0010
- 4. Screw Z0733
- 5. Outer seal GD 6024 /GD 5024
- 6. Cover strip / Upper strip discretionary
- 7. Washer SZ 0019 / Nut SZ 0109
- 8. Clamping plate SZ 0037
- 9. Threaded bar based on glass thickness, e.g. SZ 0151
- 10. Lamella fork SZ 0041
- 11. Supporting profile SZ 0003
- 12. Rubber profile SZ 0009
- 13. Lamella holder
- 14. Mounting bracket SZ 0007
- 15. Sun protection lamella SL 5001




# System design

<u>4.1</u> 2

## Assembly sequence

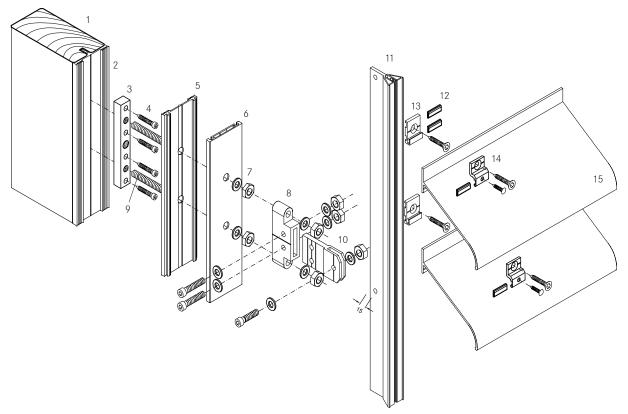

SOL\_4.1\_002.dwg

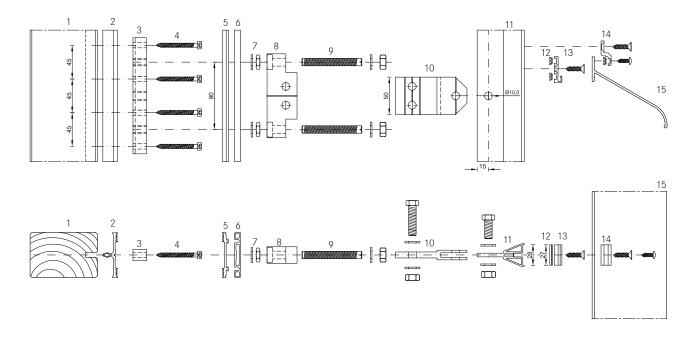




## Attachment to the building

<u>4.1</u> 3

Stainless steel bearings (refer to the following diagrams) are used to directly connect the Norden Facade SOL sun pro-tection lamellae with the supporting structure vertical to the glass facades or parallel to the glass surface on glass roofs. This requires a free width of at least 15 mm plus a safety clearance to the glass in the glazing groove. Se-cure mounting is necessary, as the entire load of the sun protection system is transferred to the bearings. Static analysis is also necessary. The processor is responsible for attaching the sun protection bearings.

### Types of attachment

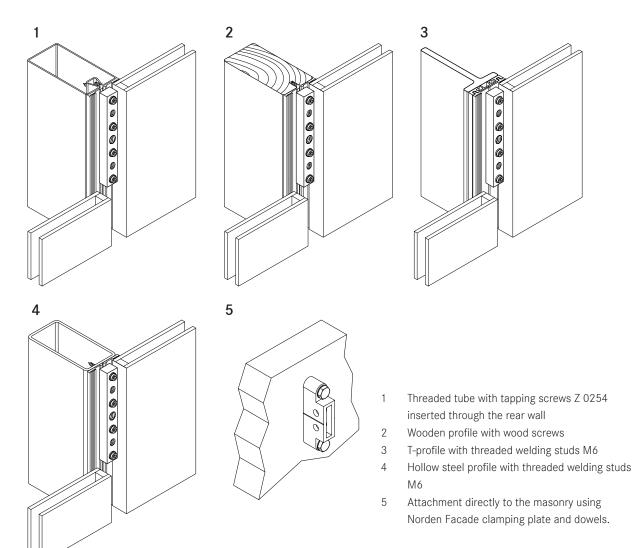



# 4

## Determining the lamellae spacing

We use IT-assisted sun position calculations to optimise the sun protection systems that we manufacture. The following spacing tables will help you draw up your own plans.


We have considered and weighted two key sun irradiation factors in order to define the lamella spacing. Weak irradiation for a low position of the sun and the corresponding anti-glare effects, as well as the high position of the sun with its more substantial energy irradiation, equivalent to the unwanted thermal load during summer. In our tables, we have compromised between transparency and anti-glare, as additional energy caused by solar irradiation is considered a more positive effect in the cold months of the year. This may lead to glare over the course of the day.

#### Spacing between the sun protection and the glazing

Various clamping plates can be used to influence the spacing between the sun protection lamellae and the glass. Kindly refer to the table on the following page.

#### Lamella length


The lamellae can be provided in lengths of up to 6 m. The lamellae are fixed in place with sufficient dilation clearance along their clamped axis. A special double lamella fork and the pairwise arrangement of the lamella carrier rails enable these butt joints. A dual-zone system ensures a favourable lamella sag ratio. Example (SL 5001): Span 2 m  $\rightarrow$  1.2 mm and 2.8 m  $\rightarrow$  4.6 mm.

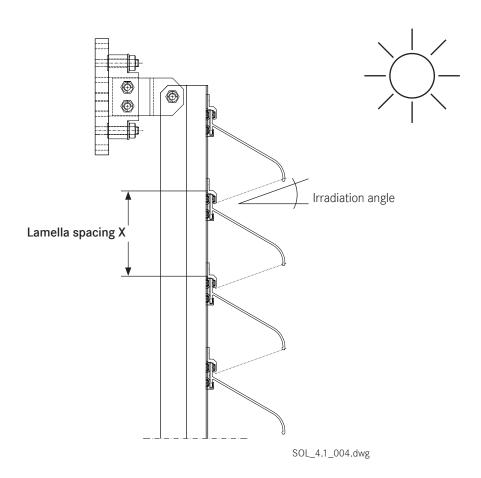



## Lamella forms and lamella spacing





Lamella SL 5001

Lamella form	Span		Proportion of	Depth of the	Spacing between cover
	Installation height /m	Free span	unobstructed view	clamping plate	strip and lamella
SL 5001	0 - 10 2.8 m	38 - 40%	40 mm	approx. 135 mm approx. 195 mm	
	10 - 100	2.3 m		150 mm	approx. 245 mm

	Lamella spacing for SL 5001			
Installation site	East	South	West	
Berlin	160	155	155	
Bochum	155	161	164	
Bremen	154	161	161	
Frankfurt/M.	159	161	161	
Hamburg	155	159	159	
Hannover	156	160	160	
Leipzig	161	156	156	
Munich	166	157	157	

Table with values for lamella spacing X in millimetres

## Clamping plate spacing


Stuttgart

The vertical spacing between the sun protection attachment points on the mullion, i.e. rafters, must not be greater than  $2\ m.$ 

## NODDEN FACTADEN


## Cleaning function

 $\frac{4.1}{6}$ 

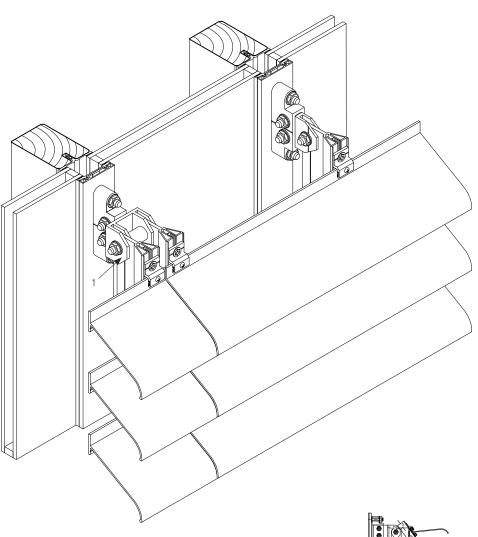

### Movable lamella zone

It is advantageous to raise the sun protection in zones in order to clean the glass surface located underneath. The lamella carrier rails must be arranged pairwise for this purpose. Here, a special double lamella fork (1) is used to support the lamella carrier rails. When necessary, the corresponding screw fittings are loosened and the sun protection zone can be raised or folded down by hand. Gas springs increase the ease of use.

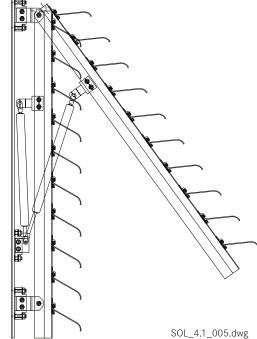



## Norden Facade SOL **Project planning**



## **Project planning with Norden Facade SOL**

The facade alignment and the passage of the sun at times of the day and the year must be considered when preparing the sun protection project. The first hour after sunrise and the final two hours before sunset can be dis-

regarded in calculating the daily passage of the sun. In our latitudes, the sun is never higher than 15° relative to the horizon during these times. There will be no nuisance caused by energy irradiation in these hours.


# **Enquiries concerning Norden Facade SOL sun protection**

We require the following information from you in order to compile all of the necessary system components cor-rectly:

Pos: \_\_\_\_\_\_

For BV

**1) Lamella type** SL 5001 [...]

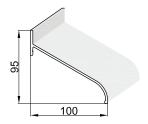

#### 2) Property location

#### 3) Installation height of the sun protection

[...] < 5 m [...] > 10 m [...] > 20 m [...] > 100 m

### 4) Alignment of the sun protection (facing the sky)

[...] North [...] East [...] South [...] West

[...] Northeast [...] Southeast [...] Southwest [...] Northwest

#### 5) Inclination of the sun protection surface relative to the perpendicular

# Norden Facade SOL **Project planning**



# **Project planning with Norden Facade SOL**

6) Desired active times for the sun protection system	
from until	from month to month
7) Lamella spacing [in mm]	
[] Lamella spacing defined by the customer $\rightarrow$	Unit "X" = mm
or	
[] Defined by Norden Facadebased on a local and in-house calculation of the sun's position	
8) Lamella installation alignment	
[] vertical [] inclined Degree of incline	[] horizontal
9) Size of the overall sun protection surface (overall)	
(Height x width in mm) X	
Number of sun protection zones	
10) Mullion/rafter spacing	
mm	
(Kindly submit any sketches and planning documents).	
11) Depth of the clamping plates Defined by the distance between the cover strip and the lame	ılla
[] 40 mm [] 100 mm [] 150 mm	

# Norden Facade SOL **Project planning**



# **Project planning with Norden Facade SOL**

<u>4.2</u>

-	tion e glass surfaces thanks to of the sun protection system		
[] Yes	[] No		
13) Attachment of	the sun protection		
[] Norden Facade	system	[] Norden Facade H []	[] Norden Facade ZL []
		Norden Facade SR	Norden Facade AK
[] alternative facad	de system		
[] directly on the r	nasonry		
bars with at least 3 make the attachme positions of the at-t	ne sun protection anchors for		
_	re made of rustproof materials. liver aluminium fasteners as 'mill-fin- E6EV1'		
[] all fasteners mil	l-finished	[] Lamellae mill-finished	
[] all fasteners in E	E6EV1	[] Lamellae in E6EV1	
[] all fasteners in F	RAL	[] Lamellae in RAL	
15) Sketches/diag	grams		